


TAPTILO QUICK START GUIDE

© OHFA Tech, Inc.

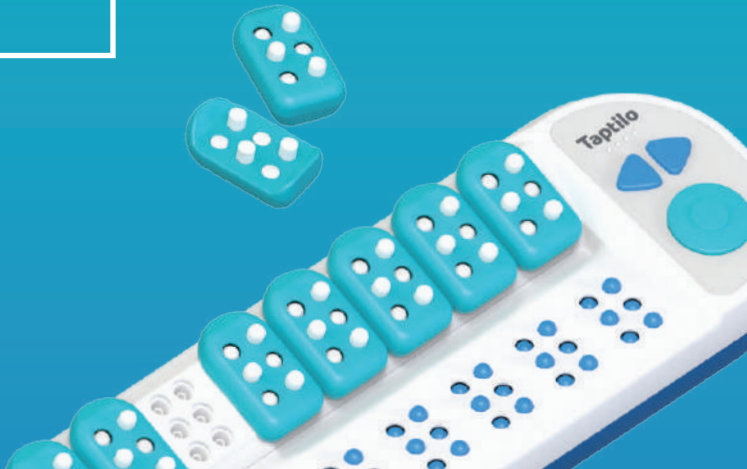

GETTING STARTED WITH TAPTILO

Download
User Guide




SELF-STUDY MODE

Activity


Read
Trace & Write
Dictation
Write
Game

Category

Alphabet
Numbers
Short words
Long words

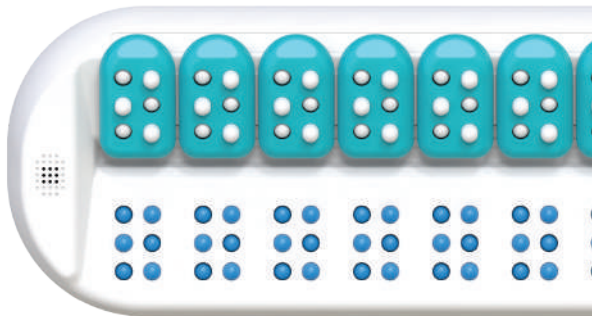

1. Press the **power button** to start the device. Make sure to charge it first.

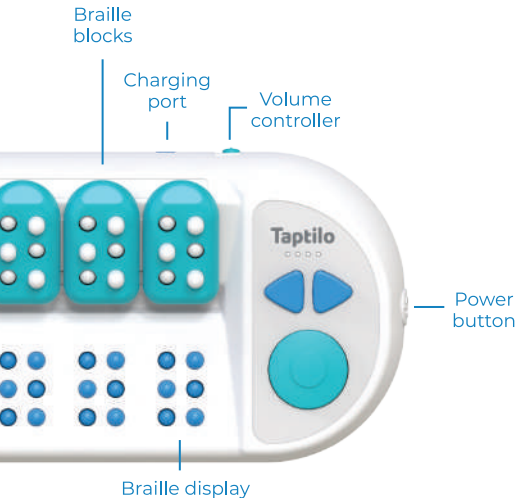

2. Follow the audio guidance to **select a program**. Use the arrow buttons to hear the options and press the circle button to select.
3. Read the braille shown on the **braille display** (lower pad).
4. To write, pick up a **braille block** and push the dots up and down.
5. To **check the result**, place the blocks back on the upper pad and press the circle button.

Tips

To hear the word again, press **left arrow** for 2 sec

To hear the spelling, press **right arrow** for 2 sec

To see contractions, press **both arrows** for 2 sec

TEACHING MODE



Download
Taptilo+ App



Pairing with the app

1. Download the Taptilo+ app using the QR code.
2. While Taptilo is on, open the app and select "Tap to connect your device".
3. From the pop-up, select your device. Make sure Bluetooth is turned on.
4. To change connection settings, go to Options > Settings.



Using the app

1. Choose a **category** from the main menu
2. **Tap a word** from the list. Taptilo will show in **braille**
3. Use the **blocks** to write the answer & press circle button
4. Check the **answer** on the app

Activity

Read

Trace & Write

Listen & Write

Options

Switch to contractions (UEB)

Quiz mode (no audio)

Add word lists

Add favorites

BRAILLE MUSIC

How to start

1. Pair the device with the app.
2. From the main menu, choose **“Music”**
3. Wait until the device restarts and follow the audio guidance.

Activity

· Play a Song

· Solfege

· Compose

To learn more, see **Taptilo User Guide**.

WHAT'S INSIDE

- Taptilo device
(includes 9 braille blocks)
- 1 Extra braille block
- Adaptor & micro USB cable
- Mini pouch
- Taptilo case
- Quick Start Guide

SUPPORT

Visit www.taptilo.com/support

Email us at support@taptilo.com

Call us at:

+1 888 278 4565 (US & Canada)

+82 2 469 4565 (International)

Download
User Guide



SAFETY & HANDLING

1. Do not use or store below 0°C or above 50°C (32°F – 122°F).
2. Do not place device or charger near a radiator or heat source.
3. Do not place sharp metal or magnetic objects near the device.
4. Make sure to use the designated charger to charge the device.
5. Do not place liquids near the device to prevent spillage.
(In case of spillage, turn device off, flip upside down and store in dry area for 2-3 days before restarting. Contact Customer Support immediately.)
6. Do not disassemble or alter any part of the device, including the serial number label.
7. Do not handle the device or the plug with wet hands.
8. Do not store under heavy weight put heavy weight or unusual stress to the device.

*Not following these guidelines may void your warranty and cause danger.

PRODUCT WARRANTY

Our warranty covers manufacturing defects in materials and workmanship that might occur during normal use of Taptilo. Consumable components like blocks are not covered. Defects resulting from improper maintenance, unauthorized repairs or failure to follow operational instructions are just a few of the items not covered. Damage caused by the use of accessories and parts, including chargers, that were not manufactured by OHFA Tech voids the limited warranty. For full details on your limited warranty, visit www.taptilo.com/warranty.

To receive service, please contact your local distributor or visit www.taptilo.com/support.

Please retain this document for future reference.